



Arkivsystem for etiketter i pdf-format

Dato:	10.03.2006
Etikettens x-nummer:	x-81960
Etikettens navn:	OPERATION INSTRUCTIONS TRON S-VDR
Etikettens format:	Bredde: 248 mm - høyde 78 mm
Folietype:	Fascal 805 orange Folie
Trykkfarge:	Sort
Ferdiggjøring:	Stanses

EPIRB Operating Instructions:


- Manual operation in bracket:
1. Break seal and remove locking pin.
 2. Push button marked PUSH to move switch to EMERGENCY position.
 3. To de-operate capsule, move switch to READY position.

To manually remove capsule from bracket, remove the bracket locking pin.

Automatic operation:

1. Capsule is installed in the bracket.
2. Capsule will automatically release and activate before reaching 4 meters depth, independent of switch position.

Temperature range -20°C to +55°C

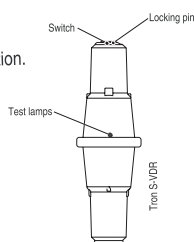

WARNING!

For marine distress use only.
Unauthorized operation is prohibited.



EPIRB Test Instructions:

1. Remove beacon from the bracket.
2. Push switch to TEST position.
3. Red test lamp will start flashing for approx. 15 sec. Then continuous - PASSED.

There will be one flash in the strobe light.
Any other behaviour indicates a fault in the capsule.

Jotron electronics a.s. cannot be held responsible for any damage caused due to incorrect use of the equipment or breach of laid down procedures or for failure of any specific component or other part of the equipment.

JOTRON electronics a.s.
3280 Tvedestrand - Norway
e-mail: sales@jotron.com

EPIRB Operating Instructions:

Manual operation in bracket:


1. Break seal and remove locking pin.
2. Push button marked PUSH to move switch to EMERGENCY position.
3. To de-operate capsule, move switch to READY position.

To manually remove capsule from bracket, remove the bracket locking pin.

Automatic operation:

1. Capsule is installed in the bracket.
2. Capsule will automatically release and activate before reaching 4 meters depth, independent of switch position.

Temperature range -20°C to $+55^{\circ}\text{C}$

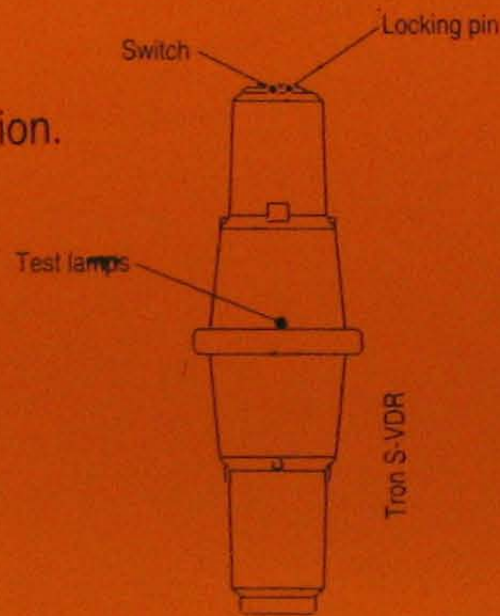

WARNING!

For marine distress use only.
Unauthorized operation is prohibited.



Jotron AS
3280 Tjodalving - Norway
e-mail: sales@jotron.com

EPIRB Test Instructions:

1. Remove beacon from the bracket.
2. Push switch to TEST position.
3. Red test lamp will start flashing for approx. 15 sec. Then continuous - PASSED.

There will be one flash in the strobe light.
Any other behaviour indicates a fault in the capsule.

Jotron AS cannot be held responsible for any damage caused due to incorrect use of the equipment or breach of laid down procedures or for failure of any specific component or other part of the equipment.